


W

WIRE ESCALATION

Gradvis oppgradering av wires tupp-stivhet og penetrasjonskraft. Man starter gjerne med en myk wire og bytter ut med gradvis stivere wires (eskalering). Se også «Step Up».



Fielder XT-A
Extreme Precision for Complex Lesions




Chronic Occlusion Guidewire for
Controlled Loose Tissue Tracking

Guide Wire with a higher tip load than Fielder XT-R,
facilitating entry into the chronic occluded lesion



ASAHI
Gaia Second
PTCA GUIDE WIRE

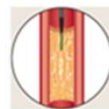


Frontline Guidewire for
Visible CTO navigation

Guidewires with a high maneuverability in the chronic
occluded lesion, and a tip designed to improve
penetrability into the lesion while remaining flexible.




ASAHI
CONFIANZA PRO
PTCA GUIDE WIRE

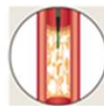

Frontline Guidewire for
Calcified Penetration

Hydrophilic coated and tapered to 0,23 mm
(0.009inch) at the tip. 9 and 12 g tip load. For
penetration of calcification and proximal or distal
thick, fibrous caps

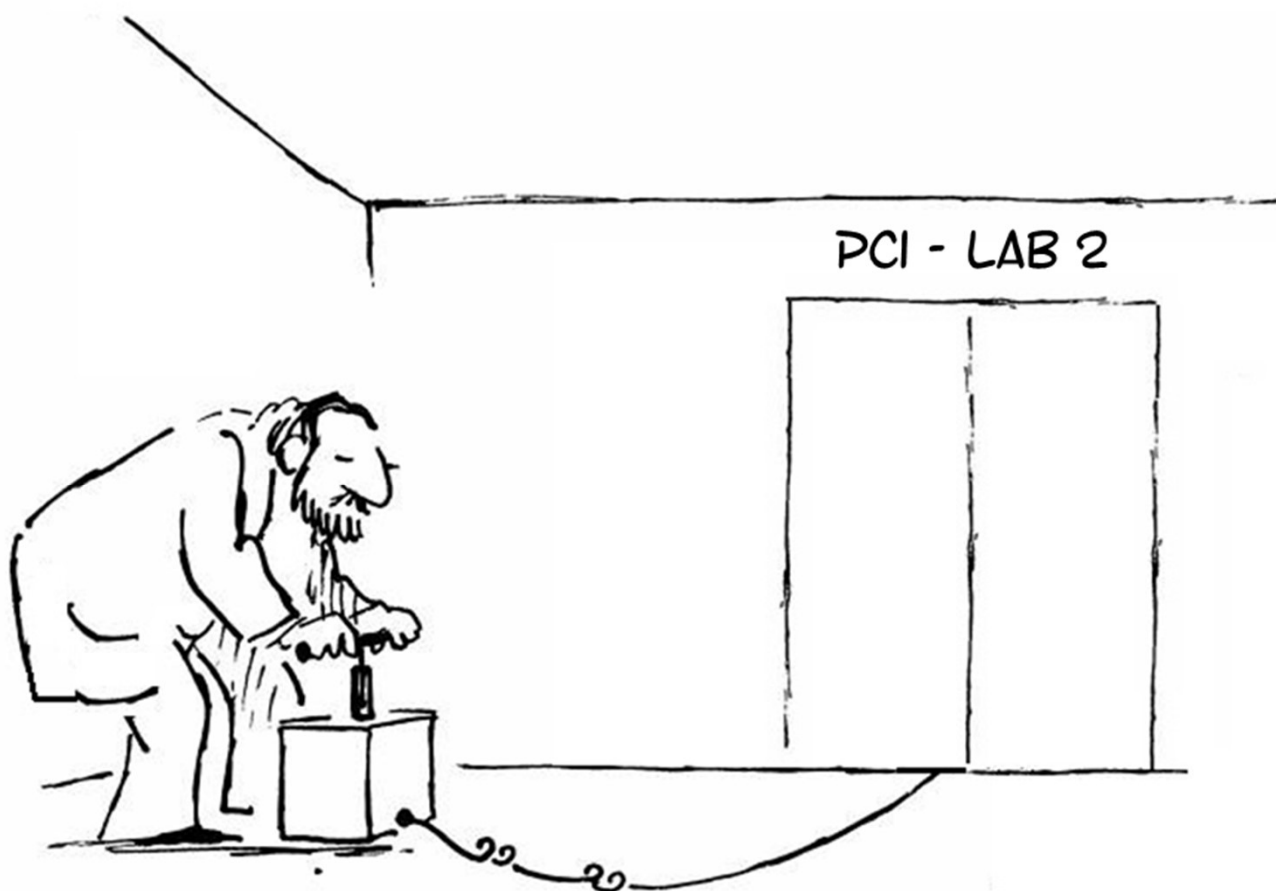

ETTER TIMER MED WIRE ESCALATION HADDE SLOBODAN
FÅTT NOK AV DEN GJENSTRIDIGE KALK-RØYSA PÅ LAB 2!